



PRODUCT DISPLAY



For Mobile Phone Cellphone Tablet Screen Repair Cleaning Tools Cleaner Brush.

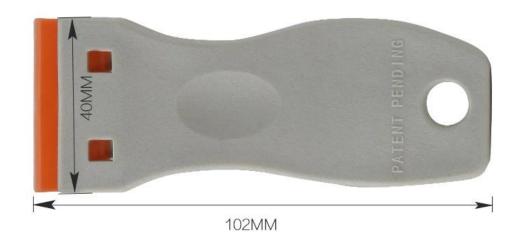

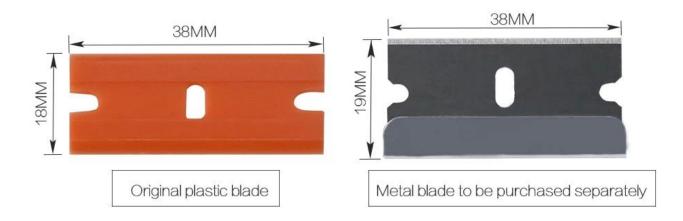

PRODUCT FEATURES




Use gestures when used



Non-slip silicone handle



Fixed blade

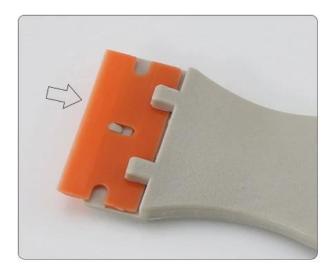

The blade is inserted from the top

Uses: scraping the ground or glass on the traces of decoration, such as chewing gum, paint, paint, cement, glue and other residual stains.

PRODUCT PHOTOGRAPH





