



Four characteristics



Adjustable air volume



Exact temperature



Heat up quickly



Use safety

Scope of use



• • •



DC distributed heating







Product Description







Front Behind



Precautions

The bottom is the air pump fixing screw, the main function is to ensure that the air pump is in the Does not fall off during transport.

When using, remove the screw first, so that there will be no working noise.



Product parameters









| SLD-850A |
|------------------|
| Hot air station |
| 600w |
| 4.00kg |
| 220VAC 50/60Hz |
| 150°C ~ 480°C |
| ≈150cm/s |
| A25~A99 |
| 0°C ~40°C |
| L185*W245*H125mm |
| L265*W165*H155mm |
| |

