

000

- 0 00 00 00 00
1. 00 0000 00 00
  2. 000 000 : 000 00

BST-100 0 00 00 00 00

00 00

- 00
1. 0000 0 0 000 00000.
  2. 000 00 000 00000. 1. 00 000 00 000 00 000 00 0000.
  3. 00 0000 0 10 00 00000. 0000 00 000 000 000 0 0 000000.
  4. 00 0 ZIZI 000 000 00 0000 000 00000.
  5. 00 20 00 ZIZI 000 00 000 0000 000.
  6. 00 30 00 00 0000 000000.
  7. 00 40 00 0000 00 000.
  8. '+' 0 0000 000 000 '-' 0 00 00000.
  9. 000 0000 00 000000 0000 0000000. 000 000 00 000 00 00000.
  10. 000 000 0 12 mm 00 15 mm 000.

00 : 00000 00 00 000 00 00000 00000 0000 00 000 000000.

## PRODUCT DISPLAY



## PRODUCT SIZE



## PRODUCT FEATURES



## **Warning**

- ▶ Please read the instruction before using and follow the operation sequence, so as to avoid the danger for improper operation .

## **Instruction**

- ▶ 1.Fill with gas after confirming the switch has been turned off.
- ▶ 2.Fill with gas as picture 1.Lead the gas tank to the filling hole and press to fill.
- ▶ 3.It takes about 10 seconds to complete the filling. Wait several minutes to let the gas be steady before use.
- ▶ 4.Please press the air intake lightly if there is ZIZI noise after filling.
- ▶ 5.Turn on the switch until you hear ZIZI noise as picture 2.
- ▶ 6.Move the flameout ring forward as picture 3.
- ▶ 7.Fire the tip with lighter as picture 4
- ▶ 8.The flame become larger when move to '+',smaller when to '- '.
- ▶ 9.Begin to use when the flame disappears and the tip turns red.  
The flame should not be too large so as to prolong the service life.
- ▶ 10.The length of the flame is about 12 mm to 15 mm.



picture 1



picture 2



picture 3



picture 4

## PRODUCT PHOTOGRAPH

---





# PRODUCT PACKAGING

WEIGHT:72G



FRONT



BACK