


For Mobile Phone Cellphone Tablet Screen Repair Cleaning Tools Cleaner Brush.

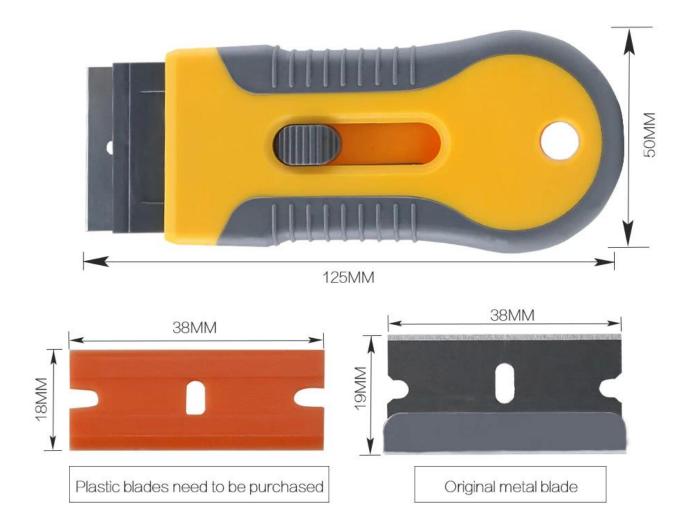






Push the button down to the top



Hand-held non-slip design

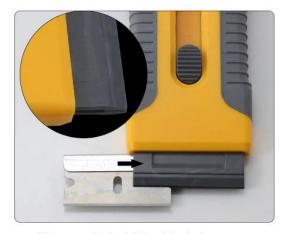

The gap to hold the blade to move out of the gap can be removed



finish using

Uses: scraping the ground or glass on the traces of decoration, such as chewing gum, paint, cement, glue and other residual stains.





