




## PRODUCT DETAILS

---



Suitable for green motherboard

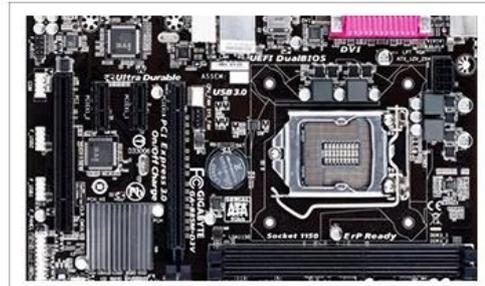

Suitable for black motherboard



Suitable for yellow motherboard



Suitable for red motherboard





Suitable for blue motherboard



Auxiliary tools: UV curing light

Squeeze a little green oil to the repaired place, pay attention to only a small amount, Brush the green oil evenly with a brush, then irradiate it with UV light for a few minutes. If it is naturally dry, it will not dry for many days. Green oil is insulating and sticky.

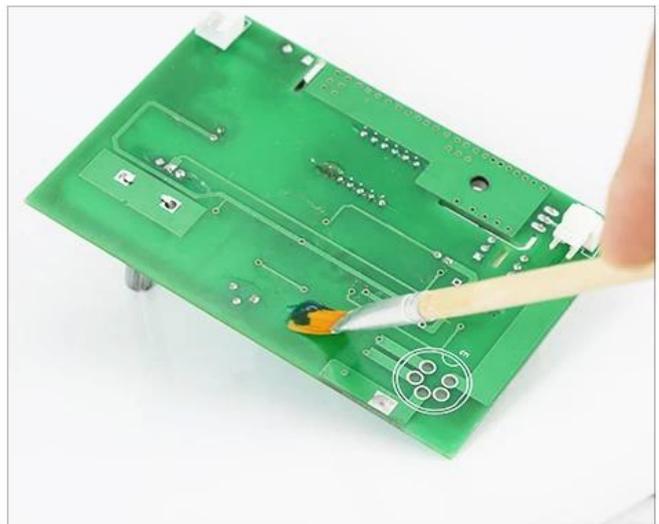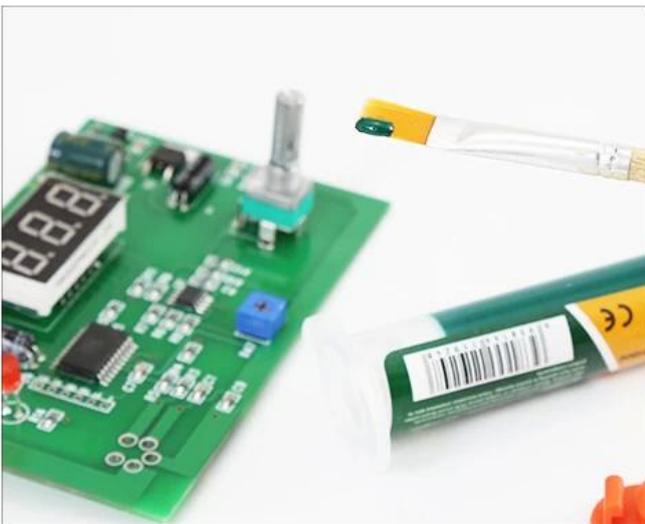

# PRODUCT PHOTOGRAPH

---





Weight: 25g



