

□□ □□ □□ □ □□ □□□□ □□□ BGA □□□ □□ □□ □ □□

11/11

100 % 閉鎖 閉鎖!

□□ □□□□ □□ □□□ □□□□□□.

□□□ □□□ □□□ □□□□□ □□□ □□□□ □□□ □□ □□□ □□□ □□□□□.

□□ □□□□ □□□□ □□ □□ □□ □□□□ □□ □□□□.

PC 上 的 各 種 應 用 程 序 均 可 在 此 處 查 詢 。


## PRODUCT DISPLAY




## UV curing solder mask ink

Dedicated to the repair of computer, mobile phone  
PCB circuit board and wire solder mask peeling or local love damage,  
and fly wire fixed insulation, is the computer, mobile phone repair  
essential materials

## PRODUCT DETAILS

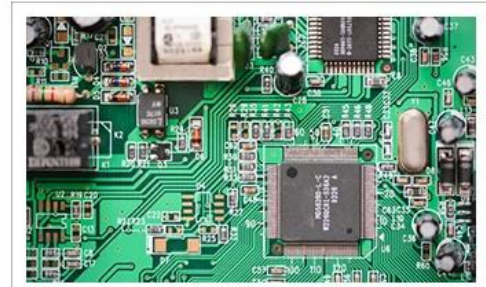

Suitable for green motherboard

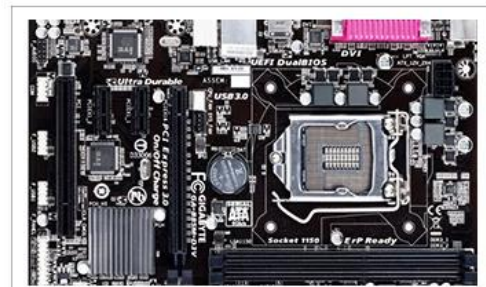

Suitable for black motherboard



Suitable for yellow motherboard



Suitable for red motherboard




Suitable for blue motherboard






Auxiliary tools: UV curing light

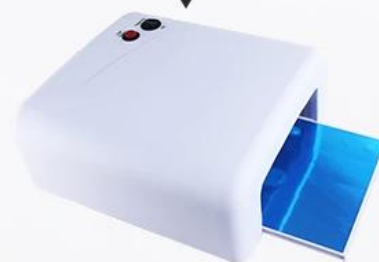

Squeeze a little green oil to the repaired place, pay attention to only a small amount, Brush the green oil evenly with a brush, then irradiate it with UV light for a few minutes. If it is naturally dry, it will not dry for many days. Green oil is insulating and sticky.

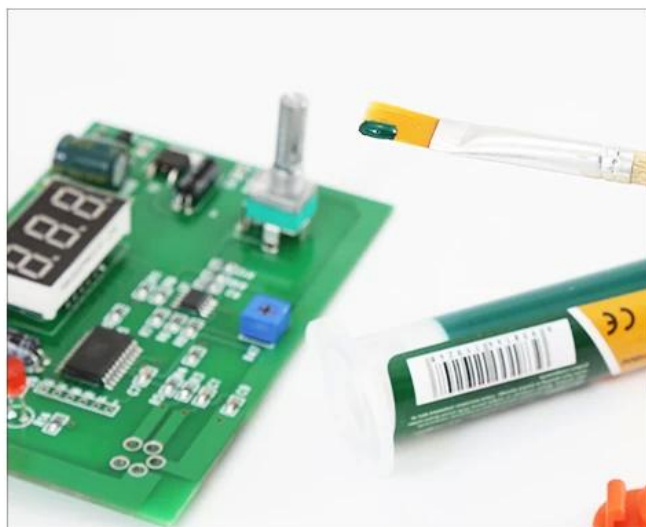

## PRODUCT PHOTOGRAPH





Weight:25g



