

BEST-939 / IC



939 IC
IC
IC
IC on apppointer IC



100
IC
IC
IC
IC - 0.09lbs 40g / IC - 0.04lbs 18g / IC - 0.01lbs 3g
6 15.3

PRODUCT DISPLAY



PRODUCT SIZE



PRODUCT DETAILS


Vacuum suction pen

Adsorption force: 40g 18g 3g




① Install a proper IC suction header on 939 suction pen.

② After installing the header, put the header on IC.

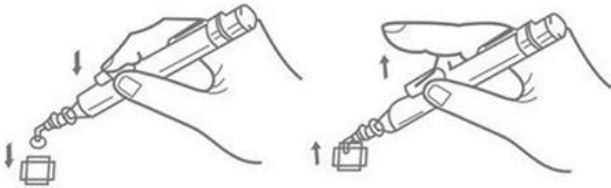

③ Press the button on the suction pen to discharge the air, then release the button to produce vacuum suction force to pick up IC.

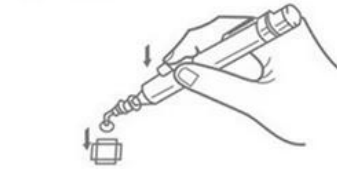

④ Put the IC on appointed place, press the button, the vacuum pen discharges air to let the IC fall off.



⑤ The suction pen have three size header: small, medium and larger.

1. Larger size for 40G.
2. Medium size for 18G.
3. Small size for 3G.

PRODUCT PHOTOGRAPH





PRODUCT PACKAGING

WEIGHT:24G

FRONT



270MM

BACK

