

Syringe-type **Plastic booster rod**

Plug and play

Lightweight | Comfortable grip





Six characteristics



Precise dosage control



Comfort and labor-saving



Universal injection booster



Plug and Play



Lightweight and convenient

ABS

ABS plastic



Applicable scope

Suitable for needle type flux oil, tin paste, curing green oil





Plug and play convenient and fast

Plastic material, sturdy and lightweight, with low push-out resistance, easy to control



Ergonomic Design



Small and lightweight, the handle is ergonomically designed,
Comfortable grip to improve work efficiency.



Usage instructions



1. Open the lid by turning it counterclockwise



2. Install the appropriate needle



3. Open the end cap of the syringe barrel

Note: The white rubber stopper in the syringe cannot be removed.




4. Install the booster rod, push it to use


Comfortable and labor-saving



The push rod exhaust hole design reduces the air resistance in the syringe,
More comfortable and labor-saving, more precise control.

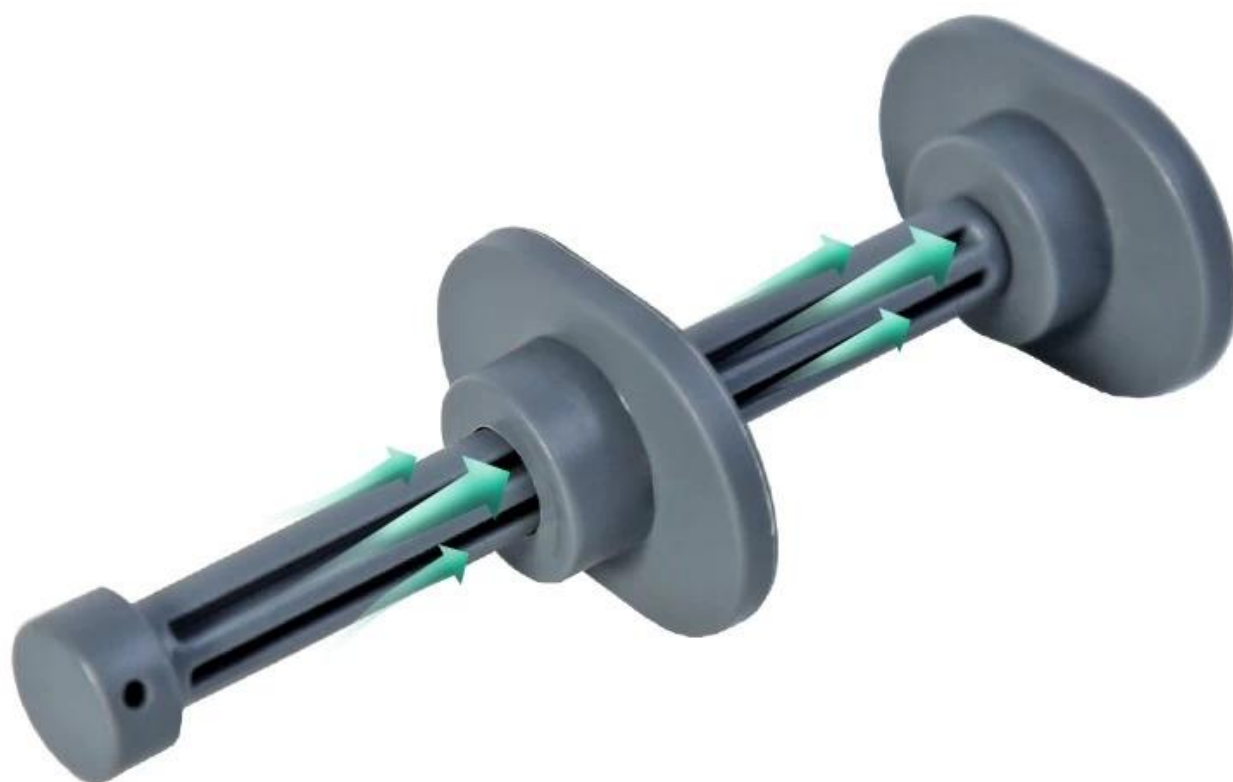

Product parameters

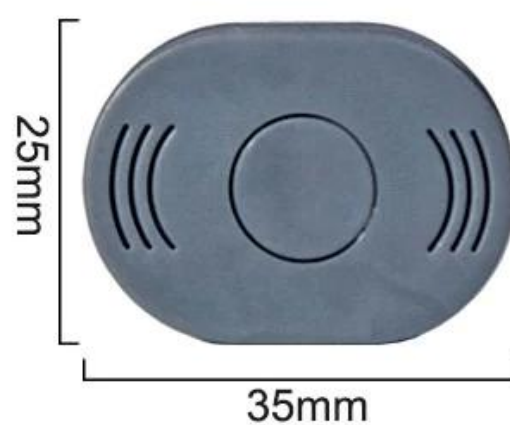

160mm



84mm

Name

Plastic booster

Model

BST-017

Material

ABS plastic

G.W.

≈14g

Package dimensions

84*160mm

Product Size

35*89*25mm

*The above dimensions are all measured by hand,
if there is any error, it is within 1-3mm.